INSTALLATION INSTRUCTIONS

for the

Kodak MINILOADER 2000 LIGHTWEIGHT RECEIVE MAGAZINE


for the

Kodak MINILOADER 2000

Service Code: 3477



Qualified service personnel must do this installation.

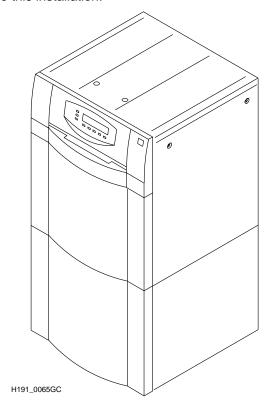



PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.



This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.


Section 1: Packing List

| Part No. | Description | Quantity |
|----------------------|--|--|
| Catalog No. 721 8944 | MINILOADER 2000 LIGHTWEIGHT RECEIVE MAGAZINE - 18 x 24 | Determined by the |
| Catalog No. 721 8951 | MINILOADER 2000 LIGHTWEIGHT RECEIVE MAGAZINE - 24 x 30 | number of MAGAZINES that the customer ordered. |
| 9188526 | ROLLER - metal | 2 |
| 1F6920 | INSTALLATION INSTRUCTIONS | 1 |

1F6920 – 12MAR03 3

Section 2: Installation

Installing the Kodak MINILOADER 2000 LIGHTWEIGHT RECEIVE MAGAZINE

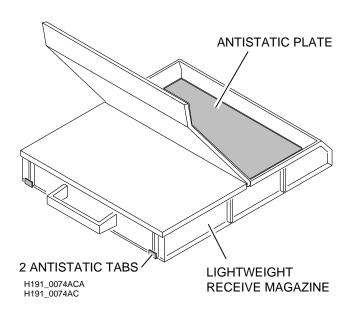




Important

These instructions apply to only:

- Kodak MINILOADER 2000 with a serial number less than 2140.
- LIGHTWEIGHT RECEIVE MAGAZINE with the ANTISTATIC PLATE and the 2 ANTISTATIC TABS.

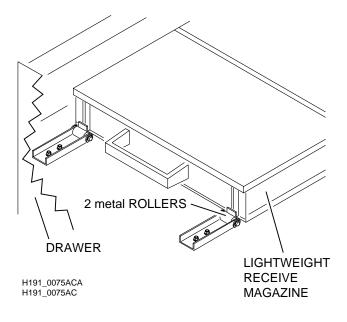

[1] Open:

- front DOOR
- DRAWER for the LIGHTWEIGHT RECEIVE MAGAZINE




Important

If the 2 metal ROLLERS are installed, you only have to insert the LIGHTWEIGHT RECEIVE MAGAZINE in the DRAWER to complete the installation.

[2] Are the 2 metal ROLLERS installed?


| Yes | No |
|------------------------|-----------------------|
| Insert the LIGHTWEIGHT | Continue with Step 3. |
| RECEIVE MAGAZINE in | |
| the DRAWER to complete | |
| the installation. | |

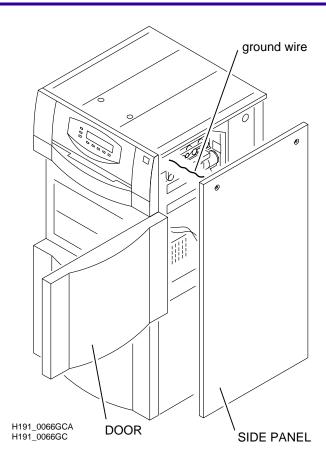




Dangerous Voltage

- [3] De-energize the MINILOADER 2000.
- [4] Open the SIDE PANEL and disconnect the ground wire.
- [5] Remove the SIDE PANEL.

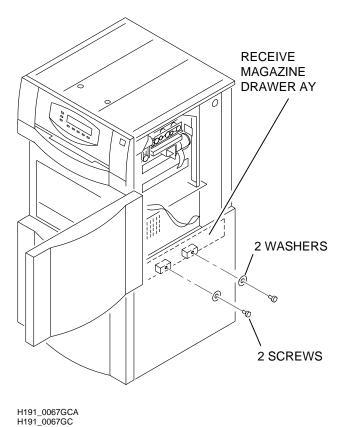

- [6] Remove from the RECEIVE MAGAZINE DRAWER AY:
 - 2 SCREWS
 - 2 WASHERS

1F6920 - 12MAR03

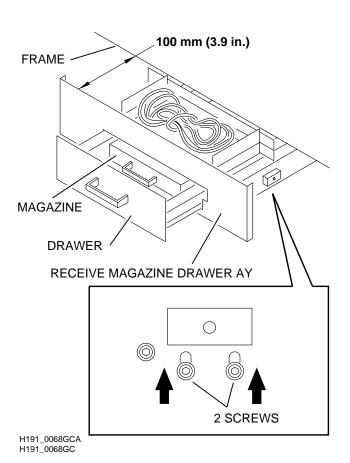




Caution

Do <u>not</u> pull the RECEIVE MAGAZINE DRAWER AY more than 100 mm (3.9 in.) from the FRAME.

- [7] Carefully pull the RECEIVE MAGAZINE DRAWER AY 100 mm (3.9 in.) from the FRAME.
- [8] Loosen:
 - · 2 SCREWS on the right side
 - · 2 SCREWS on the left side
- [9] Lift the 2 SCREWS on the right side fully up and tighten one SCREW.
- [10] Do Step 9 for the 2 SCREWS on the left side.
- [11] Remove the DRAWER and place it on a flat surface.
- [12] Remove the MAGAZINE.

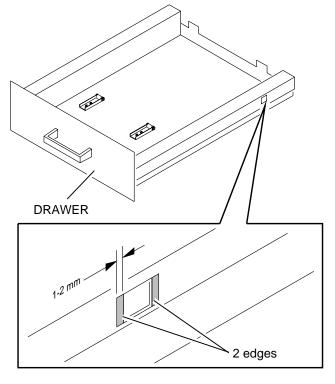


[13] Use a FILE to remove the black paint from approximately 1-2 mm of the 2 edges.




With the RECEIVE MAGAZINE DRAWER AY closed, electrical ground will occur between the MINILOADER 2000 and the 2 edges.

H191_0072GCA H191_0072GC

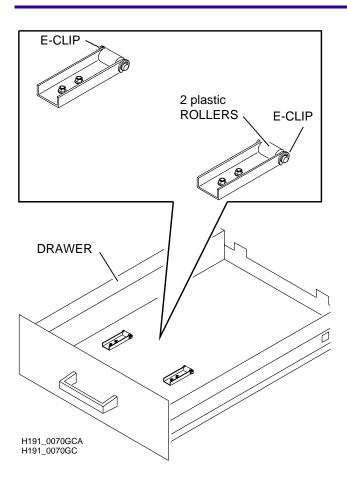

- [14] Remove the 2 E-CLIPS.
- [15] Remove and discard the 2 plastic ROLLERS.
- [16] Install:
 - 2 metal ROLLERS
 - 2 E-CLIPS

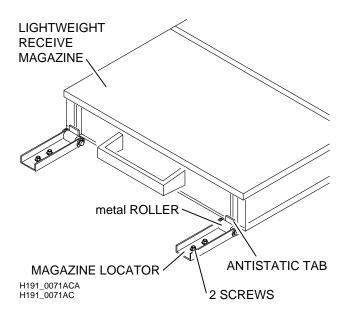

[17] Insert the LIGHTWEIGHT RECEIVE MAGAZINE into the DRAWER.



Important


Each ANTISTATIC TAB <u>must</u> make tight contact with the corresponding metal ROLLER.

[18] Does each ANTISTATIC TAB make tight contact with the corresponding metal ROLLER?

| Yes | No | | |
|------------------------|---|--|--|
| Continue with Step 19. | a. Loosen the corresponding 2 SCREWS. | | |
| | b. Move the corresponding MAGAZINE LOCATOR toward the LIGHTWEIGHT RECEIVE MAGAZINE. | | |
| | c. Tighten the 2 SCREWS. | | |
| | d. Continue with Step 19. | | |

[19] Remove the LIGHTWEIGHT RECEIVE MAGAZINE.

1F6920 – 12MAR03 7

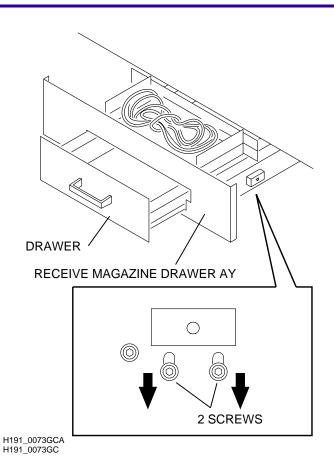

- [20] Insert the DRAWER into the RECEIVE MAGAZINE DRAWER AY.
- [21] Loosen the SCREW that you tightened in:
 - Step 9
 - Step 10
- [22] Tighten the 2 SCREWS on each side of the RECEIVE MAGAZINE DRAWER AY.
- [23] Assemble the RECEIVE MAGAZINE DRAWER AY.
- [24] Assemble the MINILOADER 2000.

Checking the Operation

[1] Insert the LIGHTWEIGHT RECEIVE MAGAZINE.



Warning

Dangerous Voltage

- [2] Energize the MINILOADER 2000.
- [3] Feed some CASSETTES into the MINILOADER 2000 to check for correct operation.

Publication History

| Publication Date | Publication No. | ECO No. | Changed Pages | File Name | Notes |
|---------------------|-----------------|---------|------------------|-----------|-----------------|
| 12MAR03 | 1F6920 | 54315 | | 1f6920.fm | New Publication |

1F6920 – 12MAR03 9

Kodak is a trademark.